Blueprint Controllers® put the power of automation to work in indoor garden environments everywhere. For safety and optimal performance, please carefully read this document **in full** before operating this product.

Using the Blueprint EZGrow Timer

Set Current Time
1. Press the TIME SET button. The hour number will flash.
2. Press the ↑ and ↓ buttons to set the hour.
3. Press the TIME SET button. The minute number will flash.
4. Press the ↑ and ↓ buttons to set the minute.
5. Press the TIME SET button. AM/PM will flash.
6. Press the ↑ and ↓ buttons to select AM or PM.
7. Press the TIME SET button to complete.

Set Cycle Start Time
1. Press the CYCLE SET button. The hour number will flash and CYCLE will appear on the display.
2. Press the ↑ and ↓ buttons to set the hour.
3. Press the CYCLE SET button. The minute number will flash.
4. Press the ↑ and ↓ buttons to set the minute.
5. Press the CYCLE SET button. AM/PM will flash.
6. Press the ↑ and ↓ buttons to select AM or PM.
7. Press the CYCLE SET button to complete.

Set Grow or Bloom Cycle
• For a cycle of 18 hours ON and 6 hours OFF, press the GROW button. "GROW 18/6" will appear on the left side of the LCD screen. This setting will power connected devices at the programmed cycle start time and run for 18 hours.
• For a cycle of 12 hours ON and 12 hours OFF, press the BLOOM button. "BLOOM 12/12" will appear on the right side of the LCD screen. This setting will power connected devices at the programmed cycle start time and run for 12 hours.

When the Blueprint EZGrow Timer is in an active cycle mode, the power indicator light will illuminate.

Reset Timer
Use a small screwdriver or pen tip to press and hold the RESET button for 2 seconds. This will delete all previously programmed settings.

Note: This timer includes a rechargeable NiMH battery which saves programmed settings in case of a power loss.

blueprintcontrollers.com

Blueprint Controllers® EZGrow Timer Limited Warranty

What This Warranty Covers
This warranty covers defects in materials and workmanship under normal use, with the exceptions stated below.

Who This Warranty Covers
This warranty applies to the original purchaser of this product with the original proof of purchase.

How Long Warranty Coverage Lasts
This warranty is in effect for a period of one years from the original date of purchase.

What This Warranty Does Not Cover
This warranty does not cover damage or defects resulting from the improper installation, alteration, abuse, accidental damage, unauthorized repair or misuse of this product. Misuse includes but is not limited to outdoor use. This warranty does not apply to cosmetic defects or other defects that do not affect the functionality of the product, and is void if the product has been damaged as a result of fire, flood, or other natural disaster. BWGS shall not be responsible for any incidental or consequential damages of any nature, including damage or injury caused to other products, machinery, buildings or property; loss of profits, time or product; or inconvenience. The original proof of purchase MUST accompany the Blueprint product for this warranty to be valid. This warranty is given in lieu of all other warranties, express or implied, including without limitation merchantability and fitness for a particular purpose.
Some states do not allow the exclusion or limitation of incidental and consequential damages, or limitations on how long an implied warranty lasts, so the above limitation(s) may not apply to you.

What BWGS Will Do
If BWGS determines the warranted product is defective in materials or workmanship during the warranty period, then BWGS, at its option, will either repair or replace the product. In no event shall the cost of repair or replacement exceed the original purchase price.
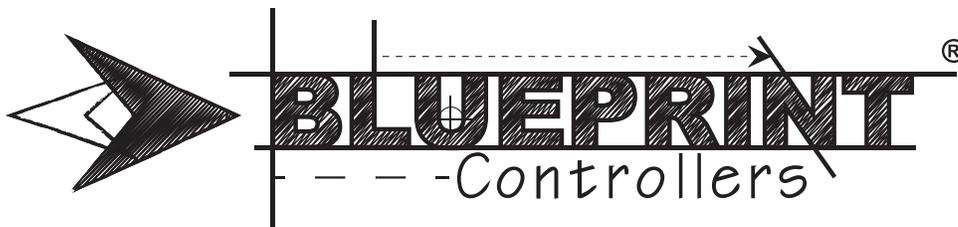
How to Obtain Warranty Service
Return this product along with the original proof of purchase to the place of purchase in accordance with store policy.

How State Law Applies
This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For technical support and warranty information, call toll-free 888-464-9676 or email info@bwgs.com.

blueprintcontrollers.com